

Changing the Code in the Gate Remote


On the gate remote, the entire lower half of the front of the case is removable.



1. Using a small screwdriver, pry the cover off (pull it upward and away from the gate remote) to reveal the battery compartment and the code switches.




2. The old code has switches 2, 4, 6, 8, and 10 in the "up" position.

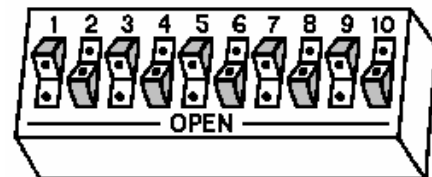

Old Code

3. To set the new code, use a pen to change the position of switches 1, 6, 9, and 10.

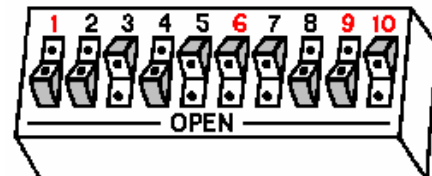

New Code

4. **Double check** the remote to verify that the new code is set correctly. Switches 1 and 2 should be up, 3 down, 4 up, 5, 6 and 7 down, 8 and 9 up, and 10 down.
5. **NOTE:** The gate remote uses a 9 volt battery. If the battery in your gate remote has not been replaced recently, this would be a good time to put in a fresh battery.
6. Replace the cover on the gate remote.
7. Make a note of the manual code that is published in the newsletter so that you can use the keypad if your remote fails to open the gate.